


Straight-type thread fittings Installation Instruction

Elbow and tee of Positionable SAE/MS
Straight thread and ISO Parallel thread

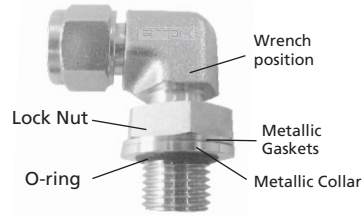

Male elbow, O.D to ISO
Parallel Thread

FITOK
阀门管件专家

Installation

1. Please apply lube on O-ring. Lube must match up with Material of O-ring ,fluid media and environment. (In this case, O-ring is made by FKM)
2. Keep the Lock Nut at the position of left picture shown(Root end of the male thread) before you start to install.
3. Rotating the male elbow, screw male thread to female thread hole till Metallic Collar get in touch with end face of female thread.
4. Screw out male thread to position you wanted (anti-clockwise rotate at most 1 turn), until compression end face to appropriate direction.
5. Use one wrench to hold the Wrench Position, at the same time,using another wrench to tighten up Lock Nut until Gasket get in touch with end face of female thread.

FITOK Group

FITOK GmbH (Headquarter)

Sprendlinger Landstr. 115, 63069 Offenbach am Main, Germany
Tel.: +49 69 8900 4498 Fax: +49 69 8900 4495

FITOK, Inc.

13843 North Promenade Blvd., Suite 750, Stafford, Texas 77477, USA
Tel.: +1 281 888 0077 Fax: +1 281 310 8687

FITOK Incorporated

1-4F, Block C, Zone E, Yingtailong Industrial Park, Dalang Street, Longhua District, Shenzhen, 518109, China
Tel.: +86 755 2803 2500 Fax: +86 755 2803 2619

FITOK Middle East Oil Equipment Trading LLC

208-209, Makateb Tower, Airport Road, P.O.Box 185412, Deira, Dubai, UAE
Tel.: +971 4 2959 853 Fax: +971 4 2959 854

info@fitokgroup.com
www.fitokgroup.com

